


INSTALLING VERTICAL BLADE DAMPERS

Contact TAMCO Customer Service for configurations not shown.

ONE-SECTION VERTICAL BLADE DAMPER



TWO-SECTION VERTICAL BLADE DAMPER

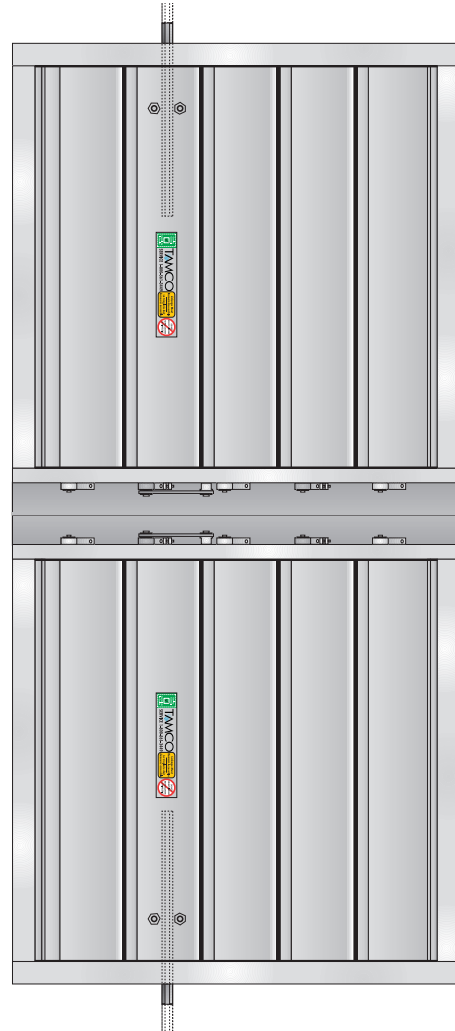

- Single-section vertical blade dampers must be installed so that linkage is at the top.
- The actuator must be mounted on the drive rod which extends beyond the bottom of the damper.
- The base of the damper must be extremely well supported.
- The customer must specify that the damper will be installed in a vertical position. Our production software will adjust the configuration automatically.
- TAMCO will honor its warranty if all of the above instructions are adhered to at the time of order and installation.